

I'm not a robot



Shark rocket professional vacuum manual

1. The Sharkclean.com vacuum includes electrical connections, wires, and moving parts that can pose a risk to users, so it's essential to inspect all components before each use and replace damaged parts only with identical ones. 2. Only use the replacement parts recommended by Sharkclean.com, as there are no serviceable parts available. 3. Follow the instructions provided in this manual for using the vacuum, as using it for other purposes can be hazardous. 4. Avoid exposing any part of the vacuum to water or liquids except for filters and dust cups. 5. Keep the appliance and cord out of reach of children and ensure adult supervision when using the vacuum near them. 6. People with reduced physical, sensory, or mental capabilities or lack of experience should use the vacuum under close supervision and follow safety guidelines. 7. Always turn off the vacuum before connecting or disconnecting any electrical parts. 8. Avoid handling the plug or vacuum with wet hands and never use it without dust cup, filters, and brushroll in place. 9. Only use Shark-branded filters and accessories to avoid voiding the warranty. 10. Keep nozzle openings clear of dust, lint, hair, and other obstructions that may reduce airflow. 1. Before plugging in or unplugging the charger, turn off the vacuum. 2. Always switch off the vacuum before making any adjustments, cleaning, maintenance, or troubleshooting. 3. Do not cut anything other than hair, fibers, or strings wrapped around the brushroll during cleaning or routine maintenance. 4. Allow all filters to air-dry completely before replacing them in the vacuum to prevent liquid from entering electric parts. 5. Never modify or attempt to repair the vacuum or battery yourself unless specified in this manual; avoid using damaged or modified batteries as they may cause fires, explosions, or injuries. 6. Switch off all controls before unplugging and turn off the vacuum when connecting or disconnecting motorized nozzles or hand tools. 7. Ensure the vacuum is powered off before picking up or carrying it to prevent unintentional starting; do not carry the appliance with your finger on the power switch. 8. Use only Shark charger DK33-248080H-U for charging, as using an incorrect charger may result in poor charging conditions. 9. Keep the battery away from metal objects like paper clips, coins, keys, nails, or screws to prevent fires or burns. 10. Store batteries below 37.4°F (3°C) and above 104°F (40°C); avoid storing them at temperatures below 40°F (5°C) or above 104°F (40°C). 11. Do not charge the battery at temperatures below 40°F (5°C) or above 104°F (40°C). 12. Keep the appliance indoors; do not store it below 37.4°F (3°C). 13. Never expose the battery to fire or temperatures above 265°F (130°C), as this may cause explosions. 14. Prior to first use, charge the Shark Li-Ion battery completely, and ensure all components are connected before operation. 15. Your vacuum comes with different types of nozzles; follow the assembly instructions for proper use. 16. When replacing the battery, dispose of it or recycle it according to local ordinances or regulations. 17. Check your vacuum's model number on the QR code label for specific information and instructions. 18. For runtime information, consult the Quick Start Guide or visit sharkclean.com/support. 1.2.1.2 Page 4 1. Allow all filters to air-dry completely for at least 24 hours before reinstalling. 2. Rinse filters with water only, and avoid using soap or other cleaning agents. 3. Clean pre-motor filters once a month, and post-motor or HEPA filters once a year. 4. Regularly tap loose dirt between washes to maintain your vacuum's performance. 5. Press the dust cup release button and remove the dust cup from the back of the handheld vacuum. 6. Pull out the foam and felt filters, then replace them with new ones if necessary. 7. Check for blockages in the brushroll by running over sharp objects or noticing a noise change while vacuuming. 8. Use scissors to loosen debris wrapped around the brushroll. 9. Turn off the vacuum, open the cover, and clear any airway blockages before cleaning the brushroll. 10. If the suction is weak, try emptying the dust cup or checking for blockages in the floor nozzle. Remove any loose debris, hair, or fibers wrapped around the brushroll. Check the connection between the handheld vacuum and wand for blockages; clear them if necessary. Inspect the clog access door in the wand and clean out any debris. Also, check the filters to see if they need cleaning. Follow instructions for thoroughly rinsing and drying the filters before reinserting them into the vacuum. When vacuuming area rugs or delicate edges, be cautious. Turn off the unit by disengaging the brushroll and restarting it with the power/selector switch. If the brushroll doesn't spin, turn off the vacuum immediately, remove any blockages, and restart it with the handle tilted back to engage the brushroll. If the floor nozzle has headlights that aren't illuminated, there's a connection issue between the handheld vacuum, wand, and nozzle. Try disconnecting and reattaching the pieces. If the vacuum turns on by itself, possible reasons include blockages, battery issues, or overheating. Follow these steps to troubleshoot: Check LED lights on the battery for recharge needs; empty dust cup and clean filters; check wand clog access door, accessories, and inlet openings for blockages; let unit and battery cool for at least 45 minutes. If the issue persists, contact Customer Service. LED lights on Li-Ion Battery may be flashing due to low charge (bottom light), optimal temperature (top and bottom lights), or other issues. Refer to specific diagrams for troubleshooting guidance. The Five-Year Limited Warranty applies to purchases from authorized retailers of SharkNinja Operating LLC. SharkNinja's Two-Year Limited Warranty: Coverage and Exclusions 1. Coverage: SharkNinja reserves the right to replace the unit with one of equal or greater value. 2. What is not covered: a. Normal wear and tear of wearable parts, such as foam filters, HEPA filters, pads, etc., which require regular maintenance and/or replacement to ensure proper functioning. b. Units tampered with or used for commercial purposes. c. Damage caused by misuse, abuse, negligent handling, failure to perform required maintenance, or damage due to mishandling in transit. d. Consequential and incidental damages. e. Defects caused by unauthorized repair persons. f. Products purchased, used, or operated outside North America. 1. Battery Coverage: The original battery will be replaced free of charge for up to two years from purchase date. Replacement batteries are available for purchase at sharkclean.com/batteries. 2. Not Covered: Normal wear and tear, tampering, commercial use, misuse, abuse, neglect, or damage due to mishandling. 3. Consequential Damages: Damages beyond the value of a replacement battery are not covered. 4. Unauthorized Repairs: Defects caused by unauthorized repair persons are not covered. 5. International Use: Products used outside North America are not covered under this warranty. In certain regions, it's against the law to dispose of spent lithium-ion batteries in regular trash or with municipal solid waste. To recycle them properly, take your used battery back to an authorized recycling center or return it to a retailer that offers recycling services. For more information on where to drop off your spent battery, contact your local recycling center. The RBRC seal on the battery indicates that SharkNinja has already covered the costs of recycling, making it easier for consumers to do their part. The Rechargeable Battery Recycling Corporation (RBRC), in collaboration with SharkNinja and other battery users, has set up programs in the United States and Canada to facilitate the collection of spent lithium-ion batteries. By returning your used battery for recycling, you'll be helping to protect the environment and conserve natural resources. You can find authorized service centers or retailers that accept recyclable batteries by contacting your local recycling center or calling 1-800-798-7398. It's also essential to keep track of important information related to your product, including model number, date code, date of purchase, store of purchase, and serial numbers. This data can be found on the QR code label at the bottom of the handheld vacuum and battery. Make sure to record this information for future reference. The provided Owner's Guide is designed to help you understand your new Shark cord-free vacuum and includes details on how to maintain and use it effectively. Note: This text has been modified to remove unnecessary content, maintain readability, and adhere to the original meaning of the article.